


This guide contains recommendations regarding the installation of HARMONY "Motif" wall patterns however this is not a step-by-step procedure.

---

### TOOLS RECOMMENDED

Brayer style rubber roller  
Exacto knife or scissors  
Construction adhesive  
Customer supplied hardware  
Plum chalk line  
Level  
Stand-off material (optional)  
Pencil or Masking tape  
1" HARMONY supplied double sided tape (or equivalent)

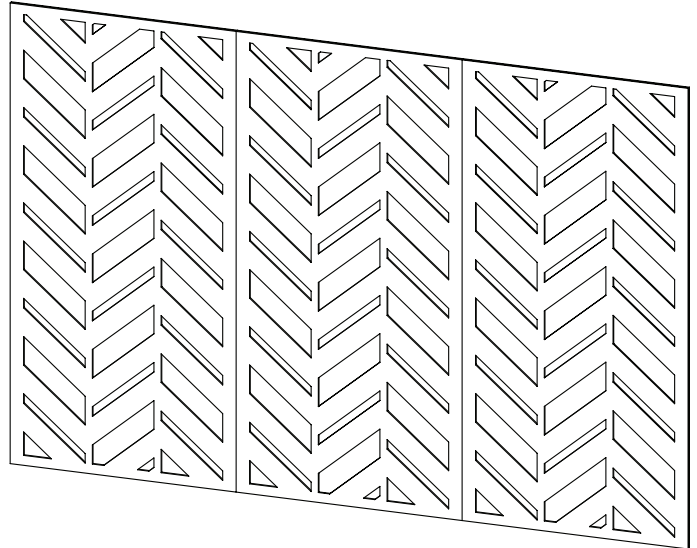

---

### DISCLAIMERS

- HARMONY does not accept responsibility for installation and recommends the installation be completed by experienced and professional trades-persons.
- HARMONY panels are semi-rigid products that require care when handling to prevent bending, creasing or damage.
- For multiple panel installations correct panel orientation must be determined
- Refer to the HARMONY Tape Application Guide for the installation of double-sided tape
- Refer to HARMONY Stand-off Installation Guide for the installation of stand-offs.

**Panel Position:** To ensure correct positioning and alignment complete a trial fit of the wall panel using a level and small pieces of double sided tape. For multiple panel installations the correct pattern orientation of each panel must be determined before proceeding with the installation. Use of a plumb chalk line is recommended to ensure correct alignment when multiple panels are installed on the same wall. Once satisfied, the position of the panel(s) is marked with a fine pencil line or masking tape.

---

**Thank you for your order!**




For questions or concerns regarding product or installation please contact us at 519-451-4118 or via email at [hello@harmonyspaces.ca](mailto:hello@harmonyspaces.ca)

Creating peaceful spaces in **HARMONY**

### METHOD 1

#### Application of Double-sided Tape with Construction Adhesive

1. Apply double-sided tape to the panel perimeter approximately 12mm (½") from the edges with additional vertical strips of double sided tape 381mm (15") apart to the back of the panel.
2. With even pressure burnish the tape to the panel using a rubber roller.
3. Apply small beads of construction adhesive to the remaining areas on the back of the panel. To prevent adhesive from creeping out from under the panel keep adhesive 12 mm ( ½") away from panel edges.
4. Remove the paper backing from the double-sided tape.
5. Using a level or previously marked position line apply the panel to the substrate.
6. With even pressure burnish the panel to the substrate from the center of the panel outwards the edges.

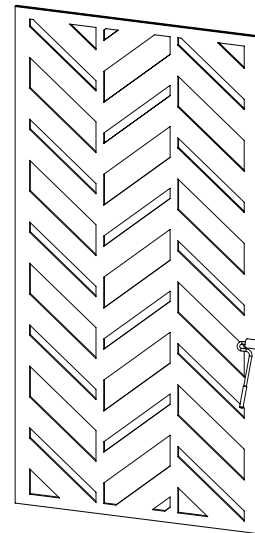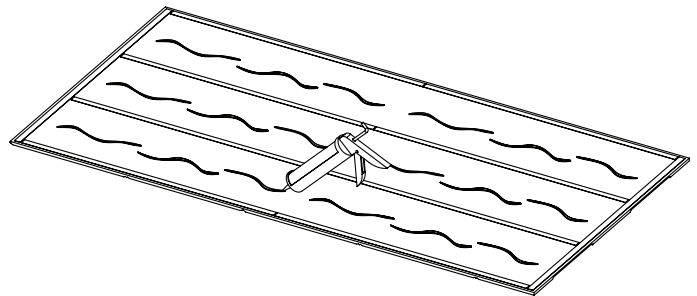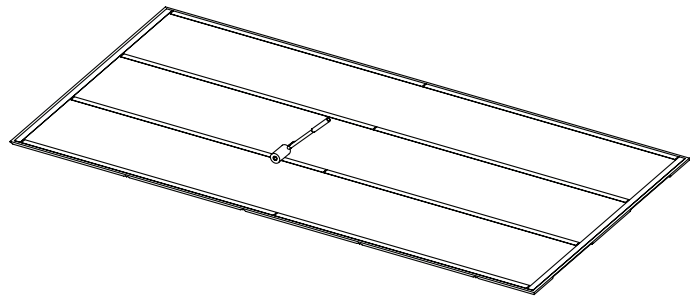

### METHOD 2

#### Application of Double-sided Tape with Customer Supplied Hardware

1. Follow STEPS 1 and 2 of Method 1.
3. Remove the other paper backing and using a level or previously marked position line apply the panel to the wall.
4. With even pressure burnish the panel to the substrate from the center of the panel outwards to the edges.
5. Remove and retain the 6 pre-cut plugs from the top panel.
6. Using Customer provided hardware, secure the bottom panel to the wall through the 6 access holes in the top panel.
7. Reinstall the 6 pre-cut plugs back into the top panel.

